


Intel* – Intel x86-64 (Desktop, Mobile, SBC PCs)

SensiML Supported Development Kits	Processor	Intel IA-64 and x86 ISA compatible processors
 <p data-bbox="257 1210 851 1246">Intel Next Unit of Computing (NUC) PC</p>	Pre-enabled Sensor Types	None
	Additional Available Sensors	Adapter boards available for sensor integration
	Available External Sensor Interfaces	UART, USB
	Pre-enabled Connectivity	None
	Programming Environment	Compilers: GCC 9.2/mingw-64 9.3
	Firmware Flashing	PCs utilize BIOS firmware (UEFI or legacy BIOS) to load and run an OS installed on mass storage device. No embedded flashing req'd.
	SensiML Knowledge Pack Formats	Library , C Source
	Useful Links	SensiML Getting Started Guide