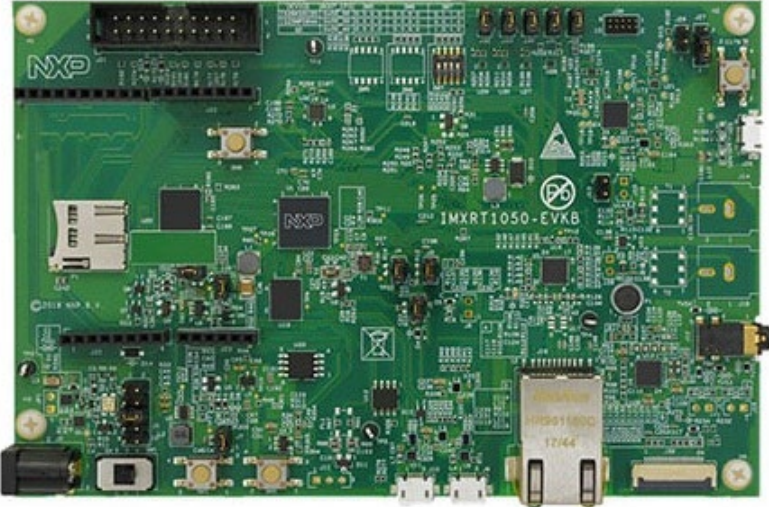


NXP* – i.MX RT Crossover MCUs

SensiML Supported Development Kit	Processor	NXP* i.MXRT Crossover MCU, Arm* Cortex-M7 32-bit (i.MXRT1050)
 <p data-bbox="155 1210 952 1243">NXP MIMXRT1050-EVK: i.MX RT1050 Evaluation Kit</p>	Pre-enabled Sensor Types	None
	Additional Available Sensors	NXP FXOS8700CQ 6DoF accel + mag, Arduino* interface for 3 rd party Arduino sensor shield boards
	Available External Sensor Interfaces	USB, CAN, I2C, SPI
	Pre-enabled Connectivity	None
	Programming Environment	IDEs: NXP Kinetis* SDK+IDE , Zephyr* , Arm mbed Compilers: IAR* , Arm Keil* , GCC
	Firmware Flashing	NXP i.MXRT eval board has built-in programming and debugger via microUSB connection to PC, no separate board or debug cable req'd
	SensiML Knowledge Pack Formats	Library , C Source
	Useful Links	SensiML Getting Started Guide , HW Getting Started Guide , MCU User Guide