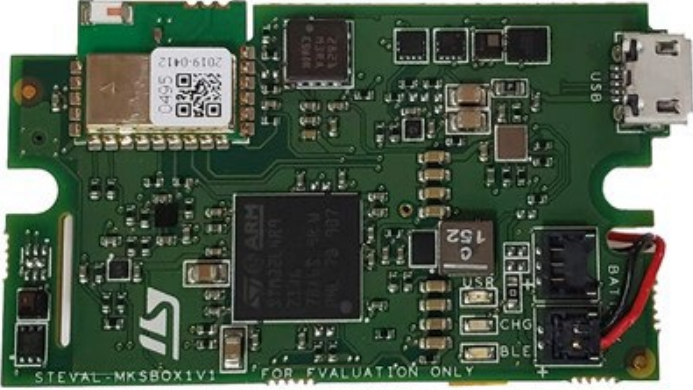


ST Microelectronics* – STM32 MCU (SensorTile.box)

SensiML Supported Development Kit	Processor	STM32L4 Arm® Cortex-M4, 32-bit (STM32L476JGY)
 <p data-bbox="282 1165 825 1243"> ST Microelectronics SensorTile.box (STEVAL-MKSBOX1V1) </p>	Pre-enabled Sensor Types i	ST LSM6DSOX 6DoF accel + gyro
	Additional Available Sensors i	ST LIS2MDL 3DoF mag, ST LPS22HH pressure sensor, ST MP23ABS1 microphone, ST HTS221 humidity sensor, + others
	Available External Sensor Interfaces	UART, I2C, SPI
	Pre-enabled Connectivity	USB, Serial, Bluetooth 5.2 BLE (ST BlueNRG-M2)
	Programming Environment	IDEs: STM32CubeMX Compilers: Arm Keil, IAR Systems
	Firmware Flashing i	Separate ST-LINK device and 14-pin ribbon cable required
	SensiML Knowledge Pack Formats	Binary , Library , C Source
	Useful Links	SensiML Getting Started Guide , Video Tutorial

* All product and company names are property of their respective holders. Use of them does not imply any affiliation with or endorsement by them.